



SV200

INSTALLATION INSTRUCTIONS CORRUGATED ROOF

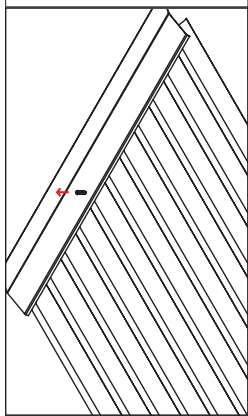

Step 1


Remove screw from Ridge Cap.

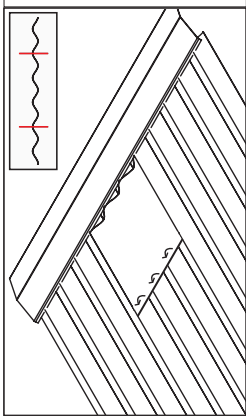

Step 2


Centre cut out between 5 Ribs. Cut 300mm x 300mm hole so edges of hole align with the highest point of ridges.

Bend back low points of Ribs back to prevent water blowing past.

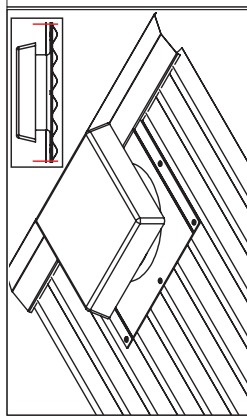

Step 3

Tuck Unit Flange under Ridge Cap so the side screw holes are aligned with highest point of ridges.

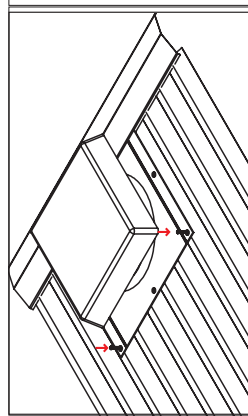


Step 4

Return Ridge Cap screw into original position by drilling through Unit Flange to fix.

Fix lower point of Unit by drilling screws through Flange holes onto highest point of ridges.


SV200

INSTALLATION INSTRUCTIONS CORRUGATED ROOF

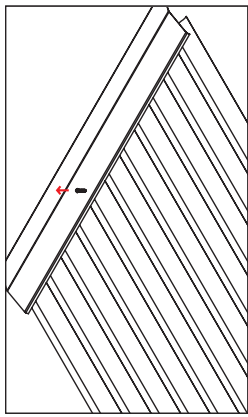

Step 1


Remove screw from Ridge Cap.

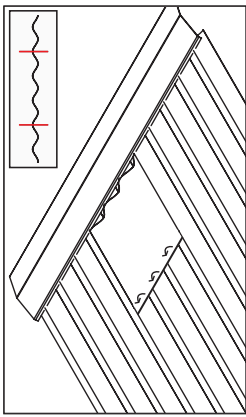

Step 2


Centre cut out between 5 Ribs. Cut 300mm x 300mm hole so edges of hole align with the highest point of ridges.

Bend back low points of Ribs back to prevent water blowing past.

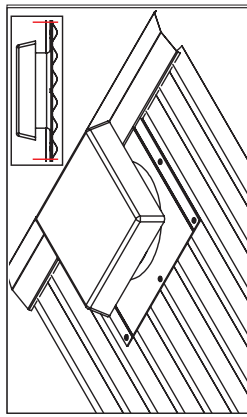

Step 3

Tuck Unit Flange under Ridge Cap so the side screw holes are aligned with highest point of ridges.

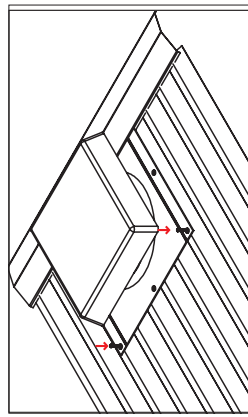

Step 4

Return Ridge Cap screw into original position by drilling through Unit Flange to fix.

Fix lower point of Unit by drilling screws through Flange holes onto highest point of ridges.